


## 03-MAC Address

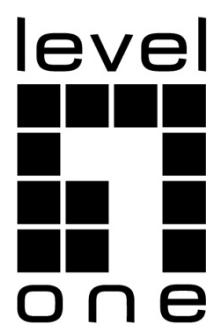

## Table of Contents

<b>1 MAC ADDRESS TABLE.....</b>	<b>1</b>
CLEAR COLLISION-MAC-ADDRESS-TABLE .....	1
CLEAR MAC-ADDRESS-TABLE DYNAMIC .....	1
MAC-ADDRESS-LEARNING ENABLE   DISABLE.....	1
MAC-ADDRESS-TABLE AGING-TIME .....	2
MAC-ADDRESS-TABLE STATIC   BLACKHOLE.....	2
L2-ADDRESS-TABLE STATIC-MULTICAST ADDRESS .....	3
SHOW COLLISION-MAC-ADDRESS-TABLE.....	4
SHOW MAC-ADDRESS-TABLE .....	4
SHOW L2-ADDRESS-TABLE MULTICAST .....	5
CLEAR MAC-NOTIFICATION STATISTICS .....	5
MAC-ADDRESS-TABLE NOTIFICATION .....	5
MAC-ADDRESS-TABLE NOTIFICATION HISTORY-SIZE .....	6
MAC-ADDRESS-TABLE NOTIFICATION INTERVAL .....	6
MAC-NOTIFICATION .....	6
SHOW MAC-NOTIFICATION SUMMARY .....	7
SNMP-SERVER ENABLE TRAPS MAC-NOTIFICATION .....	7

# 1 MAC Address Table

## clear collision-mac-address-table

<b>Syntax</b>	<b>clear collision-mac-address-table</b>
<b>Parameter</b>	none
<b>Default</b>	none
<b>Mode</b>	Admin Mode
<b>Usage</b>	If enable the function of the hash collision mac table that issued ffp ( <b>mac-address-table avoid-collision</b> ), the mac cannot be cleared.
<b>Example</b>	Clear the hash collision mac table. Switch#clear collision-mac-address-table

## clear mac-address-table dynamic

<b>Syntax</b>	<b>clear mac-address-table dynamic [address &lt;mac-addr&gt;] [vlan &lt;vlan-id&gt;] [interface [ethernet   portchannel] &lt;interface-name&gt;]</b>
<b>Parameter</b>	<b>&lt;mac-addr&gt;</b> MAC address will be deleted
	<b>&lt;vlan-id&gt;</b> Vlan id
	<b>&lt;interface-name&gt;</b> port name for forwarding the MAC packets
<b>Default</b>	None
<b>Mode</b>	Admin mode.
<b>Usage</b>	Delete all dynamic address entries which exist in MAC address table, except application, system entries. MAC address entries can be classified according to different sources, the types are as follows: DYNAMIC, STATIC, APPLICATION, SYSTEM. DYNAMIC is the dynamic MAC address entries learned by switch, it can be aged by switch automatically.
<b>Example</b>	Delete all dynamic MAC Switch#clear mac-address-table dynamic

## mac-address-learning enable | disable

<b>Syntax</b>	<b>mac-address-learning (enable   disable) (vlan &lt;vlan-id&gt;   interface ethernet &lt;interface-name&gt;)</b>
<b>Parameter</b>	<b>enable</b> Enable MAC learning through port
	<b>disable</b> Disable MAC learning through port
	<b>&lt;vlan-id&gt;</b> VLAN ID,range:1-4094
	<b>&lt;interface-name&gt;</b> Port name
<b>Default</b>	all port auto learning mac address

<b>Mode</b>	Global mode
<b>Usage</b>	After disabling the MAC address learning function of the port, the port will not be able to automatically learn the MAC address, and the user can manage it by statically adding the MAC address.
<b>Example</b>	Disable the MAC learning function of port 8 Switch#config Switch(config)#mac-address-learning disable interface ethernet 1/0/8

## mac-address-table aging-time

<b>Syntax</b>	<b>mac-address-table aging-time &lt;0   aging-time&gt;</b> <b>no mac-address-table aging-time</b>
<b>Parameter</b>	<b>0</b> 0 to disable aging. <b>aging-time</b> aging-time seconds, range from 10 to 1000000;
<b>Default</b>	Default aging-time is 300 seconds.
<b>Mode</b>	Global Mode.
<b>Usage</b>	If no destination address of the packets is same with the address entry in aging-time, the address entry will get aged. The user had better set the aging-time according to the network condition, it usually use the default value.
<b>Example</b>	Set the aging-time to 600 seconds. Switch#config Switch(config)#mac-address-table aging-time 600

## mac-address-table static | blackhole

<b>Syntax</b>	<b>mac-address-table {static   blackhole} address &lt;mac-addr&gt; vlan &lt;vlan-id&gt; [interface ethernet &lt;interface-name&gt;]   [source   destination   both]</b> <b>no mac-address-table {static   blackhole   dynamic} [address &lt;mac-addr&gt;] [vlan &lt;vlan-id&gt;] [interface ethernet &lt;interface-name&gt;]</b>
<b>Parameter</b>	<b>static</b> static entries <b>blackhole</b> filter entries, which is for discarding frames from specific MAC address, it can filter source address, destination address or the both. When choose the filter entries, blackhole address can't based on port, and not configure to interface; <b>dynamic</b> dynamic address entries <b>&lt;mac-addr&gt;</b> MAC address to be added or deleted <b>&lt;vlan-id&gt;</b> vlan number <b>&lt;interface-name&gt;</b> name of the port transmitting the MAC data packet

	<b>source</b>	based on source address filter
	<b>destination</b>	based on destination address filter
	<b>both</b>	based on source address and destination address filter, the default is both
<b>Default</b>	When VLAN interface is configured and is up, the system will generate a static address mapping entry of which the inherent MAC address corresponds to the VLAN number.	
<b>Mode</b>	Global Mode	
<b>Usage</b>	<p>In certain special applications or when the switch is unable to dynamically learn the MAC address, users can use this command to manually establish mapping relation between the MAC address and port and VLAN.</p> <p>no mac-address-table command is for deleting all dynamic, static, filter MAC address entries existing in the switch MAC address list, except application, system entries. MAC address entries can be classified according to the different source, the types are as follows: DYNAMIC, STATIC, APPLICATION, SYSTEM. DYNAMIC is the dynamic MAC address entries learned by switch, it can be aged by switch automatically. STATIC is the static MAC address entries (including blackhole entries) added by user. APPLICATION is the static MAC address entries added by application protocol (such as dot1x, security port...). SYSTEM is the additive static MAC address entries according to VLAN interface. When adding STATIC entries, it can cover the conflictive DYNAMIC, except APPLICATION, SYSTEM entries.</p> <p>After configure the static multicast MAC by this command, the multicast MAC traffic will be forwarded to the specified port of the specified VLAN.</p>	
<b>Example</b>	<p>Port 1/0/1 belongs to VLAN200, and establishes address mapping with MAC address 00-03-0f-f0-00-18.</p> <pre>Switch#config Switch(config)#mac-address-table static address 00-03-0f-f0-00-18 vlan 200 interface ethernet 1/0/1</pre>	

## I2-address-table static-multicast address

<b>Syntax</b>	<b>I2-address-table static-multicast address {&lt;ip-addr&gt;  &lt;mac-addr&gt;} vlan &lt;vlan-id&gt; interface [ethernet &lt;interface-name&gt;]   port-channel &lt;port-channel-id&gt;</b> <b>no I2-address-table static-multicast (address {&lt;ip-addr&gt;  &lt;mac-addr&gt;}   vlan &lt;vlan-id&gt;) [interface (ethernet &lt;interface-name&gt;)   port-channel &lt;port-channel-id&gt;)]</b>	
<b>Parameter</b>	<b>&lt;ip-addr&gt;</b>	IP address add or delete IP address
	<b>&lt;mac-addr&gt;</b>	add or delete MAC address
	<b>&lt;interface-name&gt;</b>	port that transfer MAC data packets
	<b>&lt;port-channel-id&gt;</b>	aggregate port name of transfer MAC data packets
	<b>&lt;vlan-id&gt;</b>	VLAN number
<b>Default</b>	When VLAN interface is configured and is up, the system will generate a static address mapping entry of which the inherent MAC address corresponds to the VLAN number	
<b>Mode</b>	Global Mode	

<b>Usage</b>	<p>In certain special applications or when the switch is unable to dynamically learn the MAC address, users can use this command to manually establish mapping relation between the MAC address and port and VLAN.</p> <p>After configure the static multicast MAC by this command, the multicast MAC traffic will be forwarded to the specified port of the specified VLAN.</p>
<b>Example</b>	<p>Configure a static multicast ip 232.0.0.1, the egress is ethernet 1/0/1.</p> <pre>Switch#config Switch(config)# l2-address-table static-multicast address 232.0.0.1 vlan 200 interface ethernet 1/0/1</pre>

## show collision-mac-address-table

<b>Syntax</b>	<b>show collision-mac-address-table</b>			
<b>Parameter</b>	<b>None</b>			
<b>Default</b>	None			
<b>Mode</b>	Global Mode.			
<b>Usage</b>	If enable the function of the hash collision mac table that issued ffp ( <b>mac-address-table avoid-collision</b> ), the collision mac which issued ffp use * to sign.			
<b>Example</b>	Show the hash collision mac table. Switch#config Switch(config)#show collision-mac-address-table The max number can be recorded is 200 The max number of collision is 0 The current number recorded is 0  <table><tr><td>MAC Address</td><td>VLAN</td><td>Collision-count</td></tr></table>	MAC Address	VLAN	Collision-count
MAC Address	VLAN	Collision-count		

## show mac-address-table

<b>Syntax</b>	<b>show mac-address-table [static   blackhole   aging-time &lt;aging-time&gt;   count] [address &lt;mac-addr&gt;] [vlan &lt;vlan-id&gt;] [count] [interface &lt;interface-name&gt;]</b>														
<b>Parameter</b>	<table> <tr> <td><b>static</b></td><td>static entries</td></tr> <tr> <td><b>blackhole</b></td><td>filter entries</td></tr> <tr> <td><b>&lt;aging-time&gt;</b></td><td>address aging time</td></tr> <tr> <td><b>count</b></td><td>entry's number</td></tr> <tr> <td><b>&lt;mac-addr&gt;</b></td><td>entry's MAC address</td></tr> <tr> <td><b>&lt;vlan-id&gt;</b></td><td>entry's VLAN number</td></tr> <tr> <td><b>&lt;interface-name&gt;</b></td><td>entry's interface name</td></tr> </table>	<b>static</b>	static entries	<b>blackhole</b>	filter entries	<b>&lt;aging-time&gt;</b>	address aging time	<b>count</b>	entry's number	<b>&lt;mac-addr&gt;</b>	entry's MAC address	<b>&lt;vlan-id&gt;</b>	entry's VLAN number	<b>&lt;interface-name&gt;</b>	entry's interface name
<b>static</b>	static entries														
<b>blackhole</b>	filter entries														
<b>&lt;aging-time&gt;</b>	address aging time														
<b>count</b>	entry's number														
<b>&lt;mac-addr&gt;</b>	entry's MAC address														
<b>&lt;vlan-id&gt;</b>	entry's VLAN number														
<b>&lt;interface-name&gt;</b>	entry's interface name														
<b>Default</b>	MAC address table is not displayed by default														
<b>Mode</b>	Admin and Configuration Mode.														
<b>Usage</b>	This command can display various classes of MAC address entries. Users can also use <b>show mac-address-table</b> to display all the MAC address entries.														
<b>Example</b>	Display all the filter MAC address entries.														

---

```
Switch#show mac-address-table blackhole
```

---

## show l2-address-table multicast

Syntax	show l2-address-table multicast ([count]   [ vlan <vlan-id>] )				
Parameter	<vlan-id>	entry's VLAN number,range:1-4094			
Default	MAC address table is not displayed by default				
Mode	Admin and Configuration Mode.				
Usage	This command can display various classes of multicast address entries.				
Example	Display all the vlan1 multicast address entries. Switch#show l2-address-table multicast vlan 1				
	Vlan Address	Insert	Type	Creator	Ports
	-----				

## clear mac-notification statistics

<b>Syntax</b>	<b>clear mac-notification statistics</b>
<b>Parameter</b>	None
<b>Default</b>	None
<b>Mode</b>	Admin mode
<b>Usage</b>	When this command is used with show command, it is able to check the executive result by show command after executing this command.
<b>Example</b>	Switch#clear mac-notification statistics Switch#

## mac-address-table notification

<b>Syntax</b>	<b>mac-address-table notification</b> <b>no mac-address-table notification</b>
<b>Parameter</b>	none
<b>Default</b>	Disable
<b>Mode</b>	Global Mode
<b>Usage</b>	This command is used with trap switch of snmp. When disabling the MAC address notification, other configuration can be shown, but the function is invalid .
<b>Example</b>	Enable the MAC address notification. Switch#config Switch(config)#mac-address-table notification Switch(config)#

## mac-address-table notification history-size

<b>Syntax</b>	<b>mac-address-table notification history-size &lt;0-500&gt;</b> <b>no mac-address-table notification history-size</b>	
<b>Parameter</b>	<b>history-size</b>	data length of sending the notification, its range from 1 to 500
<b>Default</b>	10	
<b>Mode</b>	Global Mode	
<b>Usage</b>	After the global switch is disabled, this command is also able to be configured sequentially.	
<b>Example</b>	Change the maximum history-size to be 256. Switch#config Switch(config)#mac-address-table notification history-size 256	

## mac-address-table notification interval

<b>Syntax</b>	<b>mac-address-table notification interval &lt;1-30&gt;</b> <b>no mac-address-table notification interval</b>	
<b>Parameter</b>	<b>interval</b>	interval for sending the notification, unit is second, its range from 0 to 30.
<b>Default</b>	30s	
<b>Mode</b>	Global Mode	
<b>Usage</b>	After the global switch is disabled, this command is also able to be configured sequentially.	
<b>Example</b>	Configure the interval as 30s for sending the MAC address notification Switch#config Switch(config)#mac-address-table notification interval 30	

## mac-notification

<b>Syntax</b>	<b>mac-notification {added   all   removed}</b> <b>no mac-notification</b>	
<b>Parameter</b>	<b>added</b>	added MAC address
	<b>all</b>	added and the removed MAC addresses
	<b>removed</b>	removed MAC address
<b>Default</b>	No MAC address notification.	
<b>Mode</b>	Port mode	
<b>Usage</b>	After the global switch is disabled, this command is also able to be configured sequentially.	
<b>Example</b>	Send the trap notification after the MAC address is added to Ethernet 1/0/1. Switch#config Switch(config)#interface ethernet 1/0/1	



---

```
Switch(config-if-ethernet1/0/1)# mac-notification added
```

---

## show mac-notification summary

<b>Syntax</b>	<b>show mac-notification summary</b>
<b>Parameter</b>	<b>none</b>
<b>Default</b>	Do not show the summary.
<b>Mode</b>	Admin mode
<b>Usage</b>	With this command, check the configuration of MAC address and the sending status of MAC notification trap.
<b>Example</b>	Switch#show mac-notification summary MAC address notification:enabled MAC address snmp traps:disabled MAC address notification interval = 5 MAC address notification history log size = 10 MAC address added = 0 MAC address removed = 0 MAC address moved = 0 MAC address snmp traps generated = 0

## snmp-server enable traps mac-notification

<b>Syntax</b>	<b>snmp-server enable traps mac-notification</b> <b>no snmp-server enable traps mac-notification</b>
<b>Parameter</b>	none
<b>Default</b>	Disable trap notification globally.
<b>Mode</b>	Global Mode
<b>Usage</b>	This command is used with MAC notification switch. When the switch is disabled, other configuration can be shown, but the function is invalid.
<b>Example</b>	Enable the trap notification of MAC address Switch#config Switch(config)#snmp-server enable traps mac-notification