


# **13-Commands for Network Time Management**

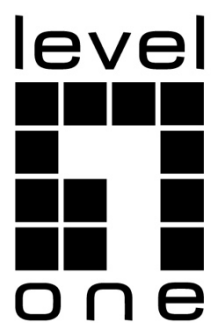

## Directory

1 Commands for SNTP.....	1
clock timezone .....	1
sntp polltime.....	1
sntp server .....	2
show sntp .....	2
2 Commands for NTP.....	3
ntp access-group.....	3
ntp authenticate .....	3
ntp authentication-key.....	3
ntp broadcast server count .....	4
ntp disable .....	4
ntp enable .....	5
ntp ipv6 multicast client.....	5
ntp multicast client.....	6
ntp server.....	6
ntp syn-interval .....	7
ntp trusted-key .....	8
show ntp status.....	8
show ntp session .....	9
3 Commands for Summer Time.....	10
clock summer-time absolute .....	10
clock summer-time recurring.....	10
clock summer-time recurring.....	11

# 1 Commands for SNTP

## clock timezone

<b>Command</b>	<b>clock timezone WORD {add   subtract} &lt;0-23&gt; [&lt;0-59&gt;]</b> <b>no clock timezone WORD</b>								
<b>Parameter</b>	<table><tr><td><b>WORD</b></td><td>timezone name, the length should not exceed 16</td></tr><tr><td><b>add   subtract</b></td><td>the action of timezone</td></tr><tr><td><b>&lt;0-23&gt;</b></td><td>the hour value</td></tr><tr><td><b>&lt;0-59&gt;</b></td><td>the minute value</td></tr></table>	<b>WORD</b>	timezone name, the length should not exceed 16	<b>add   subtract</b>	the action of timezone	<b>&lt;0-23&gt;</b>	the hour value	<b>&lt;0-59&gt;</b>	the minute value
<b>WORD</b>	timezone name, the length should not exceed 16								
<b>add   subtract</b>	the action of timezone								
<b>&lt;0-23&gt;</b>	the hour value								
<b>&lt;0-59&gt;</b>	the minute value								
<b>Default</b>	None.								
<b>Mode</b>	Global Mode								
<b>Usage Guide</b>	<p>This command configures timezone in global mode.</p> <p>The timezone name is invalid with the blank, the hour and minute value must be in the specific range.</p> <p>The no command deletes the configured timezone.</p>								
<b>Example</b>	<p>Configure the action as add for the eighth timezone globally.</p> <p><b>Switch(config)#clock timezone aaa add 8</b></p>								

## sntp polltime

<b>Command</b>	<b>sntp polltime &lt;interval&gt;</b> <b>no sntp polltime</b>		
<b>Parameter</b>	<table><tr><td><b>&lt;interval&gt;</b></td><td>is the interval value from 16 to 16284</td></tr></table>	<b>&lt;interval&gt;</b>	is the interval value from 16 to 16284
<b>&lt;interval&gt;</b>	is the interval value from 16 to 16284		
<b>Default</b>	The default polltime is 64 seconds.		
<b>Mode</b>	Global Mode		
<b>Usage Guide</b>	<p>Sets the interval for SNTP clients to send requests to NTP/SNTP.</p> <p>The no command cancels the polltime sets and restores the default setting.</p>		
<b>Example</b>	<p>Setting the client to send request to the server every 128 seconds.</p> <p><b>Switch(config)#sntp polltime128</b></p>		

## sntp server

<b>Command</b>	<b>sntp server</b> {<ip-address>   <ipv6-address>} [source {vlan <vlan no>   loopback <loopback no>}] [version <version_no>] <b>no sntp server</b> {<ip-address>   <ipv6-address>} [source {vlan <vlan no>   loopback <loopback no>}] [version <version_no>]										
<b>Parameter</b>	<table><tr><td>&lt;ip-address&gt;</td><td>IPv4 address of time server</td></tr><tr><td>&lt;ipv6-address&gt;</td><td>IPv6 address of time server</td></tr><tr><td>&lt;vlan no&gt;</td><td>Virtual LAN number, ranging from 1 to 4094</td></tr><tr><td>&lt;loopback no&gt;</td><td>Loopback identifier, ranging from 1 to 1024</td></tr><tr><td>&lt;version_no&gt;</td><td>Version number, ranging from 1 to 4, the default is 4</td></tr></table>	<ip-address>	IPv4 address of time server	<ipv6-address>	IPv6 address of time server	<vlan no>	Virtual LAN number, ranging from 1 to 4094	<loopback no>	Loopback identifier, ranging from 1 to 1024	<version_no>	Version number, ranging from 1 to 4, the default is 4
<ip-address>	IPv4 address of time server										
<ipv6-address>	IPv6 address of time server										
<vlan no>	Virtual LAN number, ranging from 1 to 4094										
<loopback no>	Loopback identifier, ranging from 1 to 1024										
<version_no>	Version number, ranging from 1 to 4, the default is 4										
<b>Default</b>	By default,do not configure the time server.										
<b>Mode</b>	Global Mode										
<b>Usage Guide</b>	Enable the specified time server as clock source  The no command deletes the specified time server.										
<b>Example</b>	Configure the time server address as 1.1.1.1, specify the interface of the source address as vlan1:  <b>Switch(config)#sntp server 1.1.1.1 source vlan 1</b>										

## show sntp

<b>Command</b>	<b>show sntp</b>		
<b>Parameter</b>	<table><tr><td><b>none</b></td><td>none</td></tr></table>	<b>none</b>	none
<b>none</b>	none		
<b>Default</b>	None.		
<b>Mode</b>	Admin/Global mode		
<b>Usage Guide</b>	Displays current SNTP client configuration and server status.		
<b>Example</b>	Displaying current SNTP configuration.  <b>Switch(config)#show sntp</b>		

## 2 Commands for NTP

### ntp access-group

<b>Command</b>	<b>ntp access-group server &lt;acl&gt;</b> <b>no ntp access-group server &lt;acl&gt;</b>
<b>Parameter</b>	<b>&lt;acl&gt;</b> ACL number, range is from 1 to 99
<b>Default</b>	Not configure the access control of NTP Server by default.
<b>Mode</b>	Global Mode
<b>Usage Guide</b>	To configure/cancel the access control list of NTP Server.  The no command delete configuration.
<b>Example</b>	To configure access control list 2 on the switch.  <b>Switch(config)#ntp access-group server 2</b>

### ntp authenticate

<b>Command</b>	<b>ntp authenticate</b> <b>no ntp authenticate</b>
<b>Parameter</b>	<b>none</b> none
<b>Default</b>	By default, NTP authentication is cancelled.
<b>Mode</b>	Global Mode
<b>Usage Guide</b>	To enable/cancel NTP authentication function.  The no command cancel NTP authentication function.
<b>Example</b>	To enable NTP authentication function.  <b>Switch(config)#ntp authenticate</b>

### ntp authentication-key

<b>Command</b>	<b>ntp authentication-key &lt;key-id&gt; md5 &lt;value&gt;</b> <b>no ntp authentication-key &lt;key-id&gt;</b>				
<b>Parameter</b>	<table> <tr> <td><b>&lt;key-id&gt;</b></td><td>The id of key, range is from 1 to 4294967295</td></tr> <tr> <td><b>&lt;value&gt;</b></td><td>The value of key, range between 1 to 16 of ascii code</td></tr> </table>	<b>&lt;key-id&gt;</b>	The id of key, range is from 1 to 4294967295	<b>&lt;value&gt;</b>	The value of key, range between 1 to 16 of ascii code
<b>&lt;key-id&gt;</b>	The id of key, range is from 1 to 4294967295				
<b>&lt;value&gt;</b>	The value of key, range between 1 to 16 of ascii code				
<b>Default</b>	The authentication key of NTP authentication is not configured by default.				
<b>Mode</b>	Global Mode				
<b>Usage Guide</b>	<p>To enable/cancel NTP authentication function, and defined NTP authentication key.</p> <p>The no command cancel NTP authentication function</p>				
<b>Example</b>	<p>To define the authentication key of NTP authentication, the key-id is 20, the md5 is abc.</p> <p><b>Switch(config)#ntp authentication-key 20 md5 abc</b></p>				

## ntp broadcast server count

<b>Command</b>	<b>ntp broadcast server count &lt;number&gt;</b> <b>no ntp broadcast server count</b>		
<b>Parameter</b>	<table> <tr> <td><b>&lt;number&gt;</b></td><td>the max number of broadcast servers, 1-100</td></tr> </table>	<b>&lt;number&gt;</b>	the max number of broadcast servers, 1-100
<b>&lt;number&gt;</b>	the max number of broadcast servers, 1-100		
<b>Default</b>	The default max number of broadcast servers is 50.		
<b>Mode</b>	Global Mode		
<b>Usage Guide</b>	<p>Set the max number of broadcast or multicast servers supported by the NTP client.</p> <p>The no operation will cancel the configuration and restore the default value.</p>		
<b>Example</b>	<p>Configure the max number of broadcast servers is 70 on the switch.</p> <p><b>Switch(config)#ntp broadcast server count 70</b></p>		

## ntp disable

<b>Command</b>	<b>ntp disable</b>
----------------	--------------------

	<b>no ntp disable</b>
<b>Parameter</b>	<b>none</b> none
<b>Default</b>	By default, NTP function are enabled on all ports.
<b>Mode</b>	VLAN Configuration Mode
<b>Usage Guide</b>	To disable/enable the NTP function on port.  The no command disables the NTP function on the port.
<b>Example</b>	To disable the NTP function on vlan1 interface.  <b>Switch(config)# interface vlan 1</b> <b>Switch(config-if-Vlan1)#ntp disable</b>

## ntp enable

<b>Command</b>	<b>ntp enable</b> <b>ntp disable</b>
<b>Parameter</b>	<b>none</b> none
<b>Default</b>	By default, global disable NTP function.
<b>Mode</b>	Global Mode
<b>Usage Guide</b>	To enable/disable NTP function globally.  Disable command global disable NTP function.
<b>Example</b>	Configure switch global enable NTP function.  <b>Switch(config)# ntp enable</b>

## ntp ipv6 multicast client

<b>Command</b>	<b>ntp ipv6 multicast client</b> <b>no ntp ipv6 multicast client</b>
<b>Parameter</b>	<b>none</b> none

<b>Default</b>	By default, Interface does not receive IPv6 NTP multicast packets.
<b>Mode</b>	VLAN Configuration mode
<b>Usage Guide</b>	<p>Configure the specified interface to receive IPv6 NTP multicast packets</p> <p>The no command will cancels the specified interface to receive IPv6 NTP multicast packets.</p>
<b>Example</b>	<p>Enable the function for receiving IPv6 NTP multicast packets on vlan1 interface.</p> <pre>Switch(config)# interface vlan 1 Switch(config-if-Vlan1)#ntp ipv6 multicast client</pre>

## ntp multicast client

<b>Command</b>	<b>ntp multicast client</b> <b>no ntp multicast client</b>		
<b>Parameter</b>	<table> <tr> <td><b>none</b></td><td>none</td></tr> </table>	<b>none</b>	none
<b>none</b>	none		
<b>Default</b>	By default, Interface does not receive NTP multicast packets.		
<b>Mode</b>	VLAN Configuration mode		
<b>Usage Guide</b>	<p>Configure the specified interface to receive NTP multicast packets.</p> <p>The no command will cancels the specified interface to receive NTP multicast packets.</p>		
<b>Example</b>	<p>Enable the function for receiving NTP multicast packets on vlan1 interface.</p> <pre>Switch(config)# interface vlan 1 Switch(config-if-Vlan1)#ntp multicast client</pre>		

## ntp server

<b>Command</b>	<b>ntp server {&lt;ip-address&gt;   &lt;ipv6-address&gt;} [version &lt;version_no&gt;] [key &lt;key-id&gt;]</b> <b>no ntp server {&lt;ip-address&gt; &lt;ipv6-address&gt;}</b>				
<b>Parameter</b>	<table> <tr> <td><b>&lt;ip-address&gt;</b></td><td>IPv4 address of time server</td></tr> <tr> <td><b>&lt;ipv6-address&gt;</b></td><td>IPv6 address of time server</td></tr> </table>	<b>&lt;ip-address&gt;</b>	IPv4 address of time server	<b>&lt;ipv6-address&gt;</b>	IPv6 address of time server
<b>&lt;ip-address&gt;</b>	IPv4 address of time server				
<b>&lt;ipv6-address&gt;</b>	IPv6 address of time server				



	<p><b>&lt;version_no&gt;</b> The version number of server, range is from 1 to 4, default is 4</p> <hr/> <p><b>&lt;key-id&gt;</b> The key id</p> <hr/>
<b>Default</b>	By default, disable.
<b>Mode</b>	Global Mode
<b>Usage Guide</b>	<p>To enable specified time server of time source.</p> <p>The no form of this command cancels the specified time server of time source.</p>
<b>Example</b>	<p>To configure time server address as 1.1.1.1 on switch.</p> <p><b>Switch(config)# ntp server 1.1.1.1</b></p>

## ntp syn-interval

<b>Command</b>	<p><b>ntp syn-interval &lt;1-3600&gt;</b></p> <p><b>no ntp syn-interval</b></p>
<b>Parameter</b>	<p><b>&lt;1-3600&gt;</b> the request packet sending interval of ntp client as 1s-3600s</p>
<b>Default</b>	By default, 64s interval.
<b>Mode</b>	Global Mode
<b>Usage Guide</b>	<p>Configure the request packet sending interval of ntp client as 1s-3600s. For responding the risk of ntp adjusting the system time under the high latency network, ntp client will select the time information with the smallest latency for the system time synchronization after sent 8 ntp time requisitions. So at the default configuration, ntp client sends the requisition packet once every 64s, after 8 times, it will adjust the time. It means to adjust the system time every 8 minutes. If user wants to configure the interval, such as one hour, user should adjust the packet sending interval as 450(3600/8) s.</p> <p>The no command recovers to be the default value of 64s.</p>
<b>Example</b>	<p>Configure to adjust the system time once an hour, and the packet sending time is 450s.</p> <p><b>Switch(config)# ntp syn-interval 450</b></p>

## ntp trusted-key

<b>Command</b>	<b>ntp trusted-key &lt;key-id&gt;</b> <b>no ntp trusted-key &lt;key-id&gt;</b>
<b>Parameter</b>	<b>&lt;key-id&gt;</b> The id of key, range is from 1 to 4294967295
<b>Default</b>	Trusted key is not configured by default.
<b>Mode</b>	Global Mode
<b>Usage Guide</b>	To configure the trusted key.  The no command cancels the trusted key.
<b>Example</b>	To configure the specified key 20 to trusted key.  <b>Switch(config)# ntp trusted-key 20</b>

## show ntp status

<b>Command</b>	<b>show ntp status</b>
<b>Parameter</b>	<b>none</b> none
<b>Default</b>	None.
<b>Mode</b>	Admin/Global Mode
<b>Usage Guide</b>	To display time synchronization status, include synchronized or not, layers, address of time source and so on.
<b>Example</b>	Display time synchronization status.  <b>Switch(config)# show ntp status</b> Clock status: synchronized Clock stratum: 3 Reference clock server: 1.1.1.2 Clock offset: 0.010 s Root delay: 0.012 ms Root dispersion: 0.000 ms Reference time: TUE JAN 03 01:27:24 2006

## show ntp session

Command	show ntp session [ <b>&lt;ip-address&gt;</b>   <b>&lt;ipv6-address&gt;</b> ]						
Parameter	<b>&lt;ip-address&gt;</b>		The IPv4 address of some specifics configured time server				
	<b>&lt;ipv6-address&gt;</b>		The IPv6 address of some specifics configured time server				
Default	None.						
Mode	Admin/Global Mode						
Usage Guide	To display the information of all NTP session or one specific session, include server ID, server layer, and the local offset according to server. (The symbol * means this server is the selected local time source)						
Example	To display the information of all NTP session.						
	<b>Switch(config)# show ntp session</b>						
		server	stream	type	rootdelay	rootdispersion	trustlevel
	*	1.1.1.2	2	unicast	0.010s	0.002s	10
		2.2.2.2	3	unicast	0.005s	0.000s	10

## 3 Commands for Summer Time

### clock summer-time absolute

<b>Command</b>	<code>clock summer-time &lt;word&gt; absolute &lt;HH:MM&gt; &lt;YYYY.MM.DD&gt; &lt;HH:MM&gt; &lt;YYYY.MM.DD&gt; [&lt;offset&gt;]</code> <code>no clock summer-time</code>												
<b>Parameter</b>	<table><tr><td><b>&lt;word&gt;</b></td><td>the time zone name of summer time</td></tr><tr><td><b>&lt;HH:MM&gt;</b></td><td>the start time, the format is hour (from 0 to 23):minute (from 0 to 59)</td></tr><tr><td><b>&lt;YYYY.MM.DD&gt;</b></td><td>the start date, the format is year (from 1970 to 2038).month (from 1 to 12).date (from 1 to 31)</td></tr><tr><td><b>&lt;HH:MM&gt;</b></td><td>the end time, the format is hour (from 0 to 23):minute (from 0 to 59)</td></tr><tr><td><b>&lt;YYYY.MM.DD&gt;</b></td><td>the end date, the format is year (from 1970 to 2038).month (from 1 to 12).date (from 1 to 31)</td></tr><tr><td><b>&lt;offset&gt;</b></td><td>the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes</td></tr></table>	<b>&lt;word&gt;</b>	the time zone name of summer time	<b>&lt;HH:MM&gt;</b>	the start time, the format is hour (from 0 to 23):minute (from 0 to 59)	<b>&lt;YYYY.MM.DD&gt;</b>	the start date, the format is year (from 1970 to 2038).month (from 1 to 12).date (from 1 to 31)	<b>&lt;HH:MM&gt;</b>	the end time, the format is hour (from 0 to 23):minute (from 0 to 59)	<b>&lt;YYYY.MM.DD&gt;</b>	the end date, the format is year (from 1970 to 2038).month (from 1 to 12).date (from 1 to 31)	<b>&lt;offset&gt;</b>	the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes
<b>&lt;word&gt;</b>	the time zone name of summer time												
<b>&lt;HH:MM&gt;</b>	the start time, the format is hour (from 0 to 23):minute (from 0 to 59)												
<b>&lt;YYYY.MM.DD&gt;</b>	the start date, the format is year (from 1970 to 2038).month (from 1 to 12).date (from 1 to 31)												
<b>&lt;HH:MM&gt;</b>	the end time, the format is hour (from 0 to 23):minute (from 0 to 59)												
<b>&lt;YYYY.MM.DD&gt;</b>	the end date, the format is year (from 1970 to 2038).month (from 1 to 12).date (from 1 to 31)												
<b>&lt;offset&gt;</b>	the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes												
<b>Default</b>	By default, there is no summer time range.												
<b>Mode</b>	Global Mode												
<b>Usage Guide</b>	<p>Configure summer time range, the time in this range is summer time. This command sets the absolute start and end time for summer time. When the system time reaches to the start time point of summer time, the clock is changed and increase &lt;offset&gt; value, the system enters summer time. When the system time reaches to the end time point of summer time, the clock is changed again, subtract &lt;offset&gt; value from system time, the system finishes summer time. Note: the end time should be bigger than the start time for configuring summer time.</p> <p>The no command deletes the configuration.</p>												
<b>Example</b>	<p>Configure the time range of summer time at 12:10 from april 6th to august 6th in 2010, offset value as 70 minutes, summer time is named as aaa.</p> <p><b>Switch(config)#clock summer-time aaa absolute 12:10 2010.4.6 12:10 2010.8.6 70</b></p>												

### clock summer-time recurring

<b>Command</b>	<code>clock summer-time &lt;word&gt; recurring &lt;HH:MM&gt; &lt;MM.DD&gt; &lt;HH:MM&gt; &lt;MM.DD&gt; [&lt;offset&gt;]</code> <code>no clock summer-time</code>
----------------	---

<b>Parameter</b>	<table> <tr> <td>&lt;word&gt;</td><td>the time zone name of summer time</td></tr> <tr> <td>&lt;HH:MM&gt;</td><td>the start time, the format is hour (from 0 to 23):minute (from 0 to 59)</td></tr> <tr> <td>&lt;MM.DD&gt;</td><td>the start date, the format is month(from 1 to 12).date(from 1 to 31)</td></tr> <tr> <td>&lt;HH:MM&gt;</td><td>the end time, the format is hour(from 0 to 23):minute(from 0 to 59)</td></tr> <tr> <td>&lt;MM.DD&gt;</td><td>the end date, the format is month(from 1 to 12).date(from 1 to 31)</td></tr> <tr> <td>&lt;offset&gt;</td><td>the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes.</td></tr> </table>	<word>	the time zone name of summer time	<HH:MM>	the start time, the format is hour (from 0 to 23):minute (from 0 to 59)	<MM.DD>	the start date, the format is month(from 1 to 12).date(from 1 to 31)	<HH:MM>	the end time, the format is hour(from 0 to 23):minute(from 0 to 59)	<MM.DD>	the end date, the format is month(from 1 to 12).date(from 1 to 31)	<offset>	the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes.
<word>	the time zone name of summer time												
<HH:MM>	the start time, the format is hour (from 0 to 23):minute (from 0 to 59)												
<MM.DD>	the start date, the format is month(from 1 to 12).date(from 1 to 31)												
<HH:MM>	the end time, the format is hour(from 0 to 23):minute(from 0 to 59)												
<MM.DD>	the end date, the format is month(from 1 to 12).date(from 1 to 31)												
<offset>	the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes.												
<b>Default</b>	By default, there is no summer time range.												
<b>Mode</b>	Global Mode												
<b>Usage Guide</b>	<p>Configure the recurrent summer time range, the time in this range is summer time. This command sets the start and the end time for the recurrent summer time. When the system time reaches to the start time point of summer time, the clock is changed and increase &lt;offset&gt; value, the system enters summer time. When the system time reaches to the end time point of summer time, the clock is changed again, subtract &lt;offset&gt; value from system time, the system finishes summer time. There is no relation between the recurrent summer time to the year, the system clock will be changed when it reaches to the start and the end time point of summer time year after year. This command supports the summer time of southern hemisphere.</p> <p>The no command delete summer time configuration.</p>												
<b>Example</b>	<p>Configure the time range of summer time at 12:10 from april 6th to august 6th year after year, offset value as 70 minutes, summer time is named as aaa.</p> <pre>Switch(config)#clock summer-time aaa recurring 12:10 4.6 12:10 8.6 70</pre>												

## clock summer-time recurring

<b>Command</b>	<b>clock summer-time &lt;word&gt; recurring&lt;HH:MM&gt; &lt;week&gt; &lt;day&gt; &lt;month&gt;&lt; HH:MM &gt;</b> <b>&lt;week&gt; &lt;day&gt; &lt;month&gt; [&lt;offset&gt;]</b> <b>no clock summer-time</b>								
<b>Parameter</b>	<table> <tr> <td>&lt;word&gt;</td><td>the time zone name of summer time</td></tr> <tr> <td>&lt;HH:MM&gt;</td><td>the start time, the format is hour(from 0 to 23):minute(from 0 to 59)</td></tr> <tr> <td>&lt;week&gt;</td><td>the week from 1 to 4, first or last</td></tr> <tr> <td>&lt;day&gt;</td><td>the week value, the value as “Sun”, “Mon”, “Tue”, “Wed”,</td></tr> </table>	<word>	the time zone name of summer time	<HH:MM>	the start time, the format is hour(from 0 to 23):minute(from 0 to 59)	<week>	the week from 1 to 4, first or last	<day>	the week value, the value as “Sun”, “Mon”, “Tue”, “Wed”,
<word>	the time zone name of summer time								
<HH:MM>	the start time, the format is hour(from 0 to 23):minute(from 0 to 59)								
<week>	the week from 1 to 4, first or last								
<day>	the week value, the value as “Sun”, “Mon”, “Tue”, “Wed”,								

	"Thu" , "Fri" , "Sat"
<month>	the month, the value as " Jan" , "Feb" , "Mar" , "Apr" , "May" , " Jun" , "Jul" , "Aug" , "Sep" , "Oct" , "Nov" , "Dec"
<HH:MM>	the end time, the format is hour(from 0 to 23):minute(from 0 to 59)
<week>	the week from 1 to 4, first or last
<day>	the week value, the value as "Sun" , "Mon" , "Tue" , "Wed" , "Thu" , "Fri" , "Sat"
<month>	the month, the value as " Jan" , "Feb" , "Mar" , "Apr" , "May" , " Jun" , "Jul" , "Aug" , "Sep" , "Oct" , "Nov" , "Dec"
<offset>	the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes
<b>Default</b>	By default, there is no summer time range.
<b>Mode</b>	Global Mode
<b>Usage Guide</b>	<p>Configure the recurrent summer time range, the time in this range is summer time. This command sets the start and end time for the recurrent summer time flexibly. When the system time reaches to the start time point of summer time, the clock is changed and increase &lt;offset&gt; value, the system enters summer time. When the system time reaches to the end time point of summer time, the clock is changed again, subtract &lt;offset&gt; value from system time, the system finishes summer time. There is no relation between the recurrent summer time to the year, the system clock will be changed when it reaches to the start and the end time point of summer time year after year. This command supports summer time of southern hemisphere.</p> <p>The no command delete summer time configuration.</p>
<b>Example</b>	<p>Configure summer time at 12:10 from the first Monday of april to the last Saturday of august year after year, offset value as 70 minutes, summer time is named as aaa.</p> <p><b>Switch(config)#clock summer-time aaa recurring 12:10 1 mon apr 12:10 last sat aug 70</b></p>